

Powder-Jack Photo Series - How to Use

Remove footplate from trunk attach w/hairpin

POWDER-JACK'S LIGHT WEIGHT FOOT PLATE STORES EASILY IN YOUR TRUNK OR BACKPACK. SECURELY ATTACH THE FOOT PLATE TO THE ROD WITH THE HAIRPIN PROVIDED.



Attach Rope to Sled and set Plate

ATTACH THE NYLON ROPE TO YOUR SLED, THEN SET THE FOOTPLATE SECURELY AS CLOSE TO THE SLED AS SHOWN.



Engage jack, then push sled out of track to resume fun!

ATTACH THE ROPE IN THE GROOVED SECTION OF THE JACK, AND BEGIN JACKING SLED TO THE DESIRED HEIGHT. ONCE THE SLED IS FREE FROM THE POWDER, PUSH THE SLED INTO FRESH SNOW, REMOVE AND RESTORE POWDER-JACK EQUIPMENT TO RESUME YOUR RIDING FUN!

